



Attached are some key pictures for the spark plug change for a Buddy 50 scooter.

1. Take off the plate with the small vent that is directly under the front of the seat

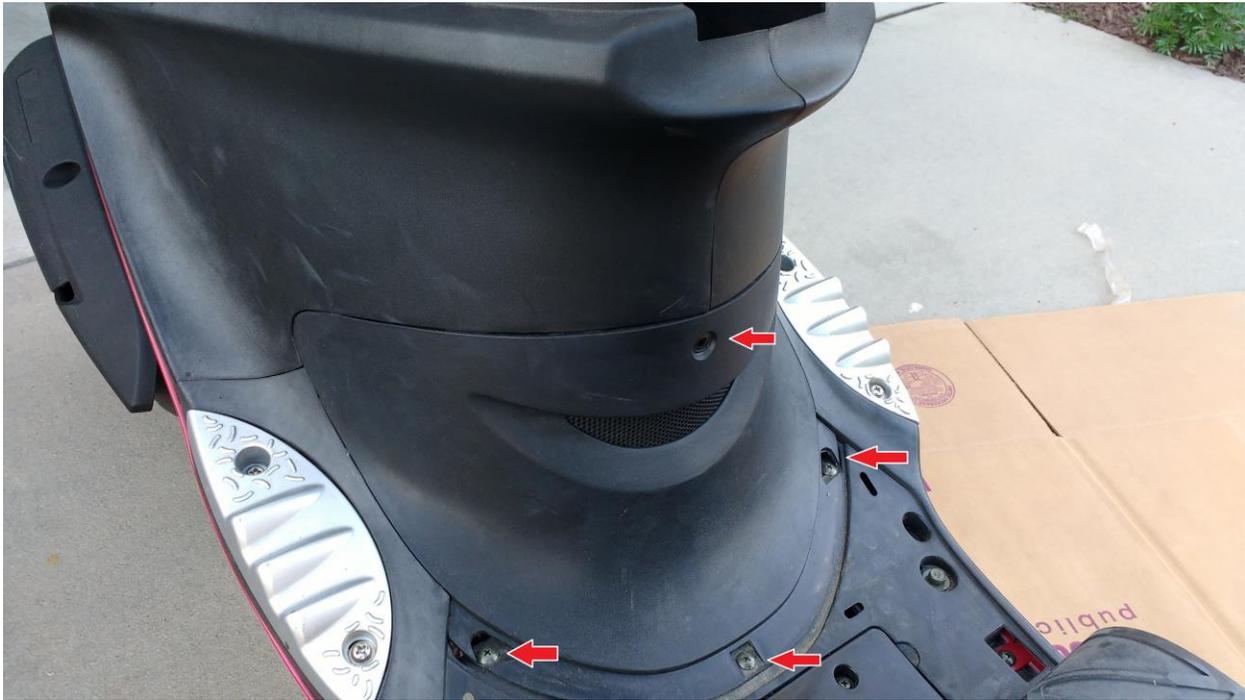


2. locate the plug right under the oil tank

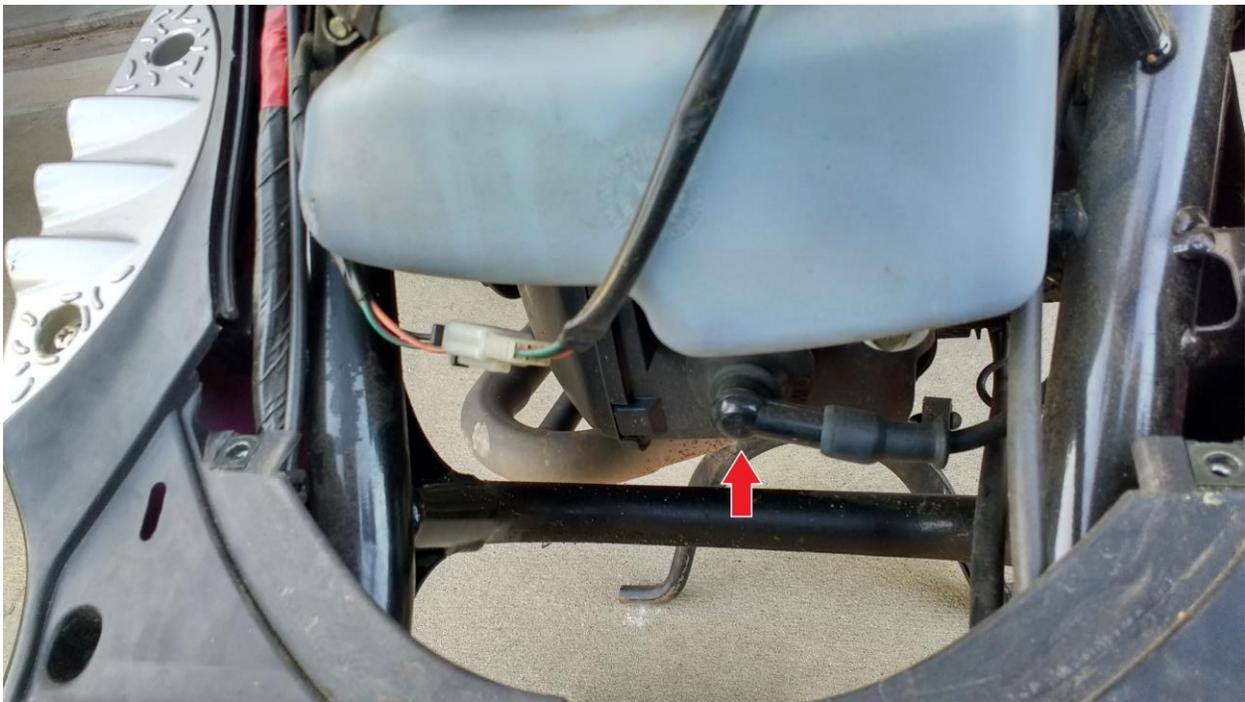

3. pull the boot off the plug



4. using the spark plug wrench, remove the plug. My wrench came with my scooter and is in a blue bag strapped to the under side of the seat when I open the seat compartment.

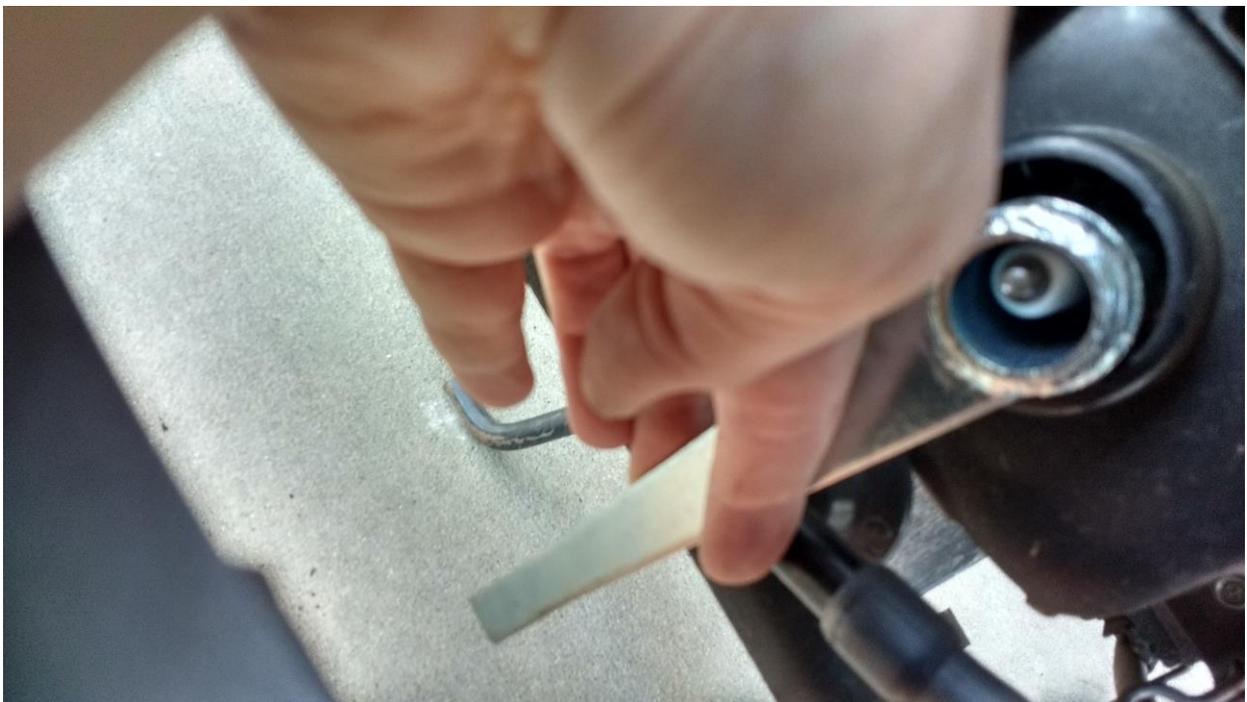

5. on the new plug, unscrew the end nip and take it off- otherwise the boot will not fit back over it. BP7HS is the plug number and can be bought online or in some auto parts stores (it will also fit other small engines, like lawnmowers)



6. hand screw the new plug in, then turn with the wrench another 1/2 to 2/3 of a turn
7. push the boot back on
8. test the engine and adjust the idle if necessary
9. install the plate